

Dolce Care Shower Mixer

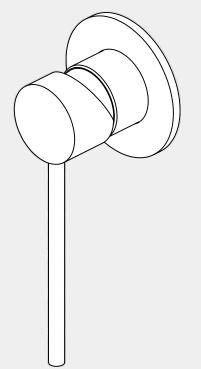


Nero

Versions:202311

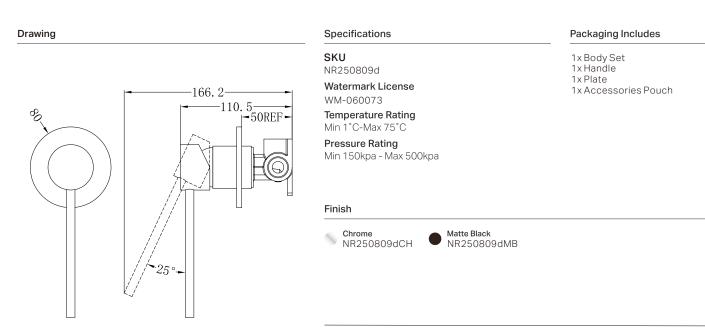


Installation Instruction

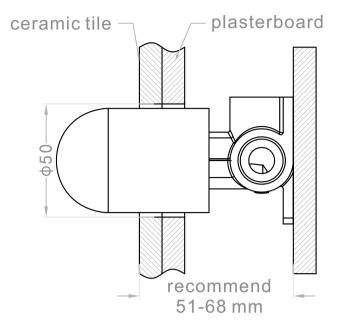


Fix body on noggin and ensure installation depth is 51-68mm from noggin to ceramic tile.
Connect cold water hose and hot water hose and test for leakage.

3.Install plasterboard and ceramic tile after drilling a ϕ 50 hole according to above picture.

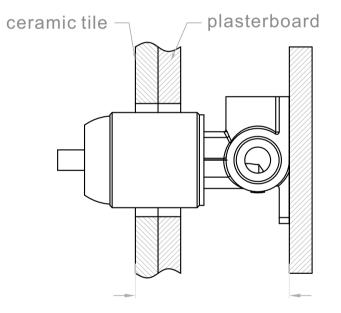

4. Remove the plastic sleeve of body.

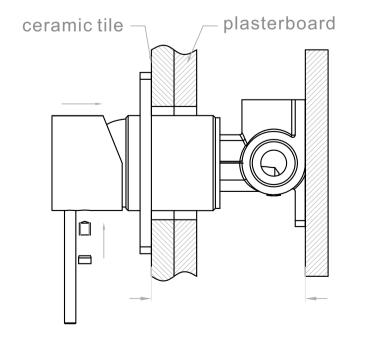

5.Install plate and handle.

www.nerotapware.com.au

Dolce Care Shower Mixer - Manual

Nero ——— 3

Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

