

Celia Shower Mixer With Divertor

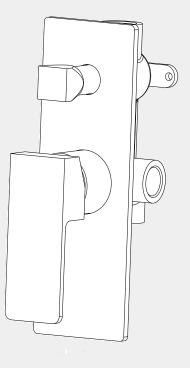


Nero

Versions:202401

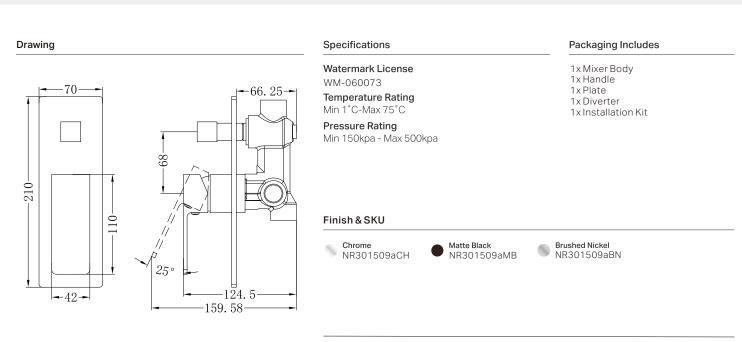

*Dimensions are nominal measurements only.

Installation Instruction

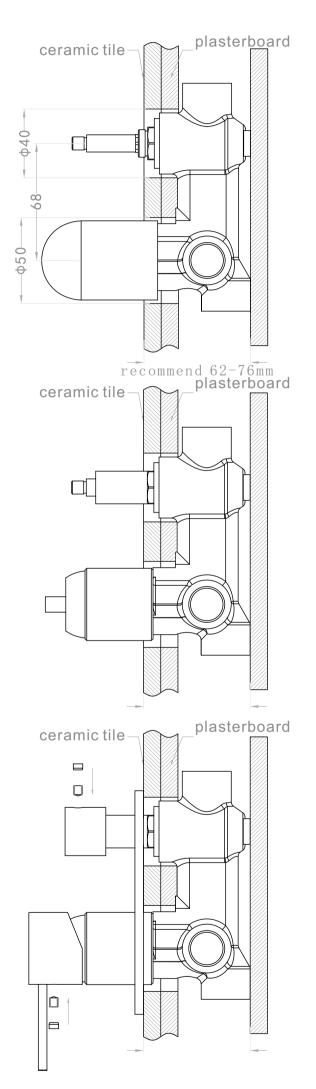

1. Fix body on noggin and ensure installation depth is 62-76mm from noggin to ceramic tile.

2.Connect cold water hose and hot water hose and test for leakage. 3.Install plasterboard and ceramic tile after drilling a ϕ 50 and a ϕ 40 hole

according to the right drawing.

- 4. Remove the plastic sleeve and install sleeve of divertor.

5.Install plate, handle and knob.

www.nerotapware.com.au

Nero

info@nerotapware.com.au nerotapware.com.au 11-13 Buontempo Road Carrum Downs Vic 3201

