

# Builder Project Rail Shower

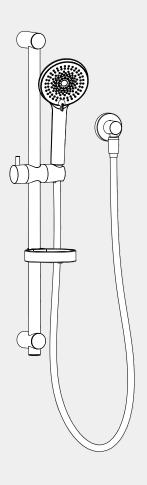



Versions:202401

## Drawing

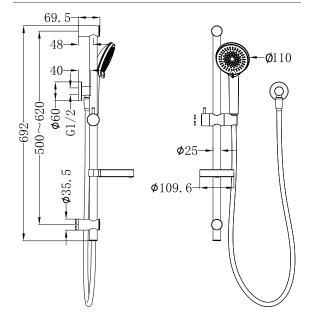

## Specifications

Watermark License

WM-060093

**Temperature Rating** 

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa


#### Packaging Includes

- 1x Hand Shower (Built-In Check Valve)
- 1x Shower Hose
- 1x Elbow
- 1x Shower Rail


#### Finish & SKU

Matte Black NR315MB

<sup>\*</sup>Dimensions are nominal measurements only.




1. Put Teflon tape on outlet thread.

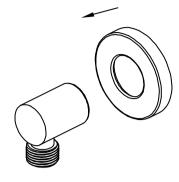

2. Pull dressing ring on the elbow body.




Screw elbow body on to outlet.

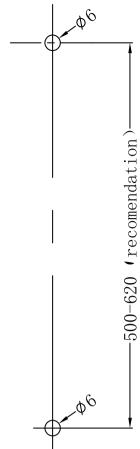


4. Drill two  $\phi$ 6mm holes according to above picture.




5. Mount bottom bracket on the  $\phi$ 6 hole by expansion plug and tapping screw.

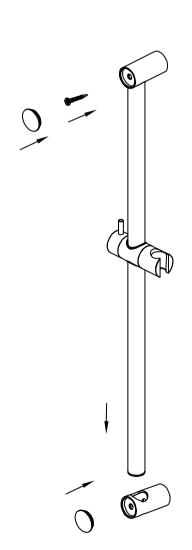

6. Plug shower rail in bottom bracket. Mount top bracket on the top hole by expansion plug and tapping screw. Push plates onto two brackets.

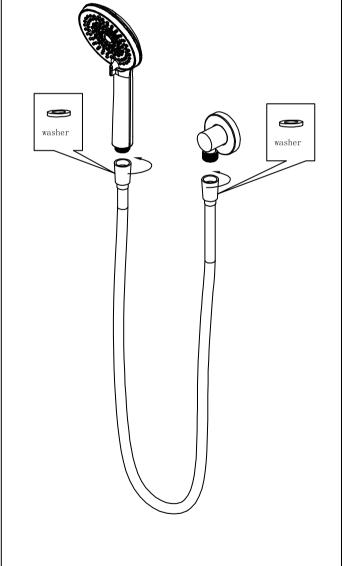

7. Connect hand shower with outlet by shower hose

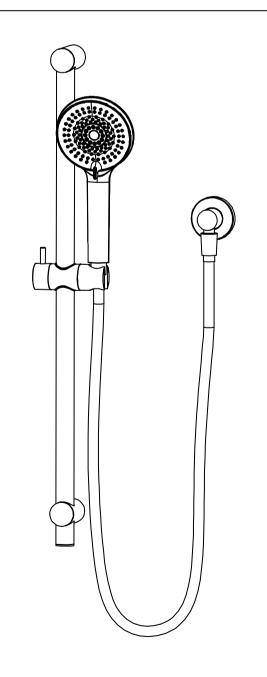

8. Test for leaks.

# Nero



